
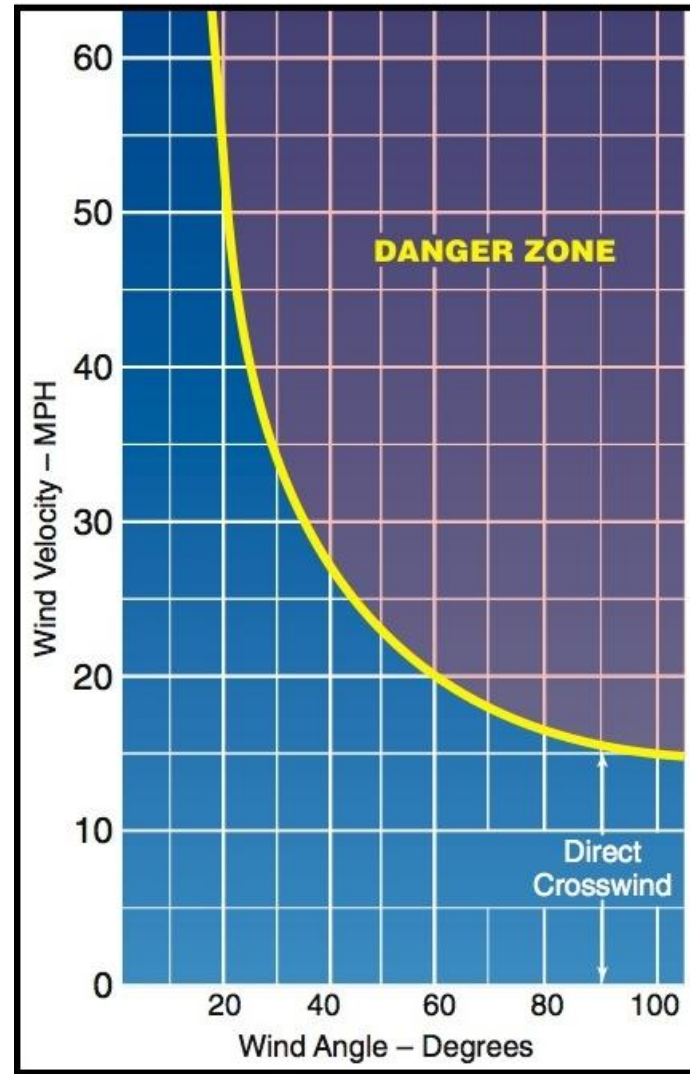


# Crosswind Component Calculator

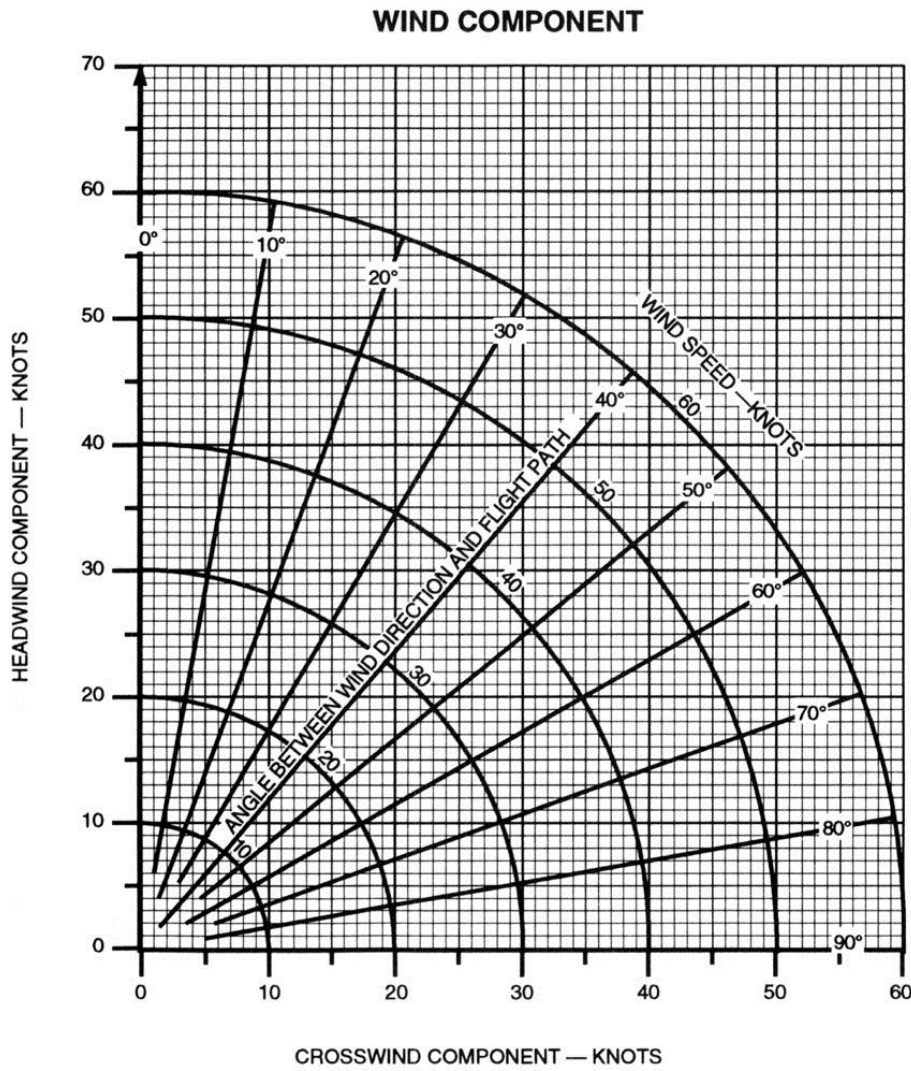

## 1/6<sup>TH</sup> THUMB RULE

Angle between runway and wind direction	10	20	30	40	50	60
Wind strength	1/6	2/6	3/6	4/6	5/6	6/6